

TV Plug-In

TV Plug-In Manual for Centrafuse™

Author: Flux Media

Version: Tested with Centrafuse 1.13

Date: May 17, 2007



TV plug-in for Centrafuse™

About

This is a TV plug-in for Centrafuse. It will allow you to attach a TV device such as WinTV or other compatible device and view television signals through Centrafuse.

Installation of the plug-in


Open the file CFTV.msi and follow the instructions. When prompted for the install path make sure to enter the path of the Centrafuse install folder and not any subfolder or any other folder. For example, "*C:\Program Files\Flux Media\Centrafuse*".

Installation (continued)

From the Settings menu, select BUTTON LAYOUT, press SETUP and you will see the screen below. Press up/down to locate the button that you want to assign to TV. Select the button and press SET.

Choose a button, press SET.

Now you will see the Select Action screen. Press up/down until you locate the TV action. Select it as the action for the selected button and click OK. Once it is set, select CLOSE to return to the Centrafuse Settings menu. Click CLOSE again to exit Settings.

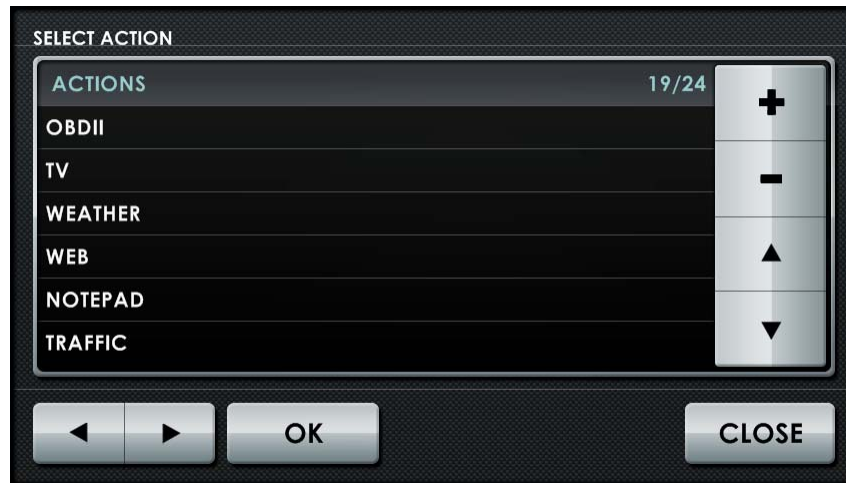

Assign TV plug-in as the Action to the selected button.


Setup

Use the arrows to navigate left or right until the SETTINGS button is shown.
Press the SETTINGS button.



SETTINGS button in Centrafuse™


In Settings, press up/down to locate TV. Select it, and press SETUP.

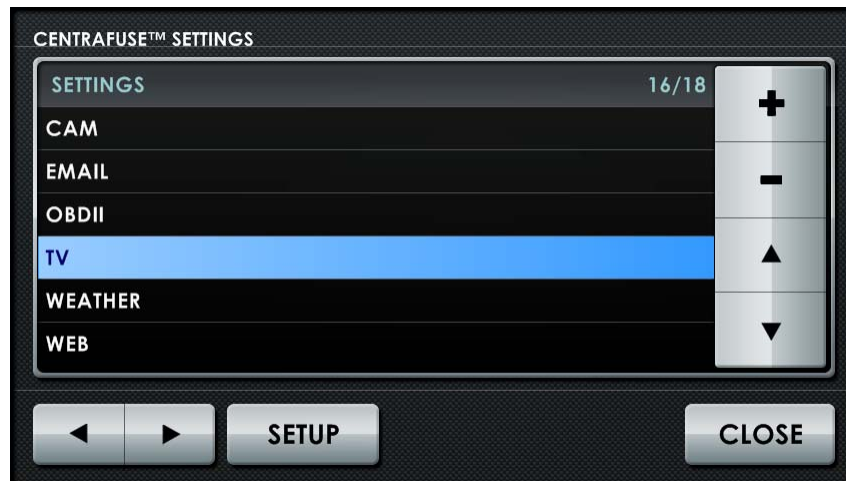

Choose TV plug-in in Centrafuse™ settings.

Setup (continued)


This will open the Setup screen for the TV plug-in. Here you can change the display name for the plug-in, and setup the audio and video devices. The video source can also be changed to SVideo or Composite. This allows you to use the other video inputs on your TV card for video games or other video tuner sources.



The screenshot shows the 'TV' settings window on page 1 of 3. It features four dropdown menus: 'DISPLAY NAME' set to 'TV', 'VIDEO DEVICE' set to 'None', 'AUDIO DEVICE' set to 'None', and 'VIDEO SOURCE' set to 'None'. At the bottom, there are navigation arrows, a 'SAVE' button, and a 'CANCEL' button.

TV Settings Page 1.

On page 2 of TV settings, you can change the list of channels if desired, and also the TV tuner source can be changed between Antenna and Cable. The frame rate can also be changed for different regions.

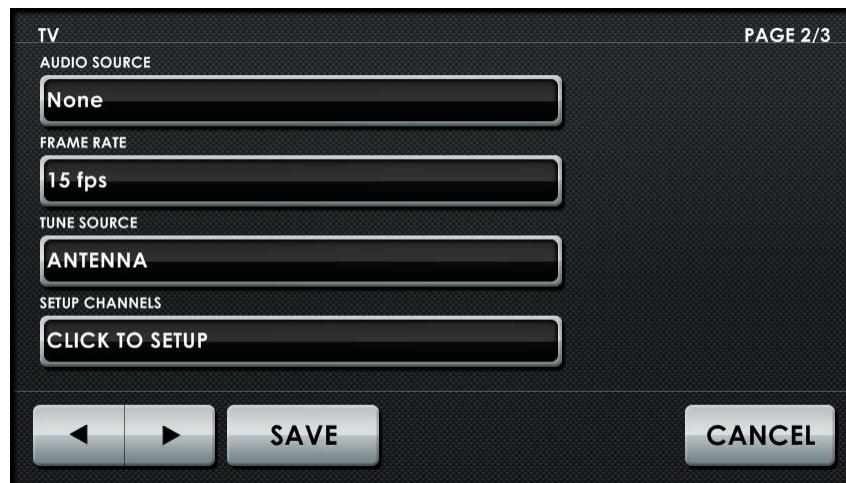


The screenshot shows the 'TV' settings window on page 2 of 3. It features four dropdown menus: 'AUDIO SOURCE' set to 'None', 'FRAME RATE' set to '15 fps', 'TUNE SOURCE' set to 'ANTENNA', and 'SETUP CHANNELS' set to 'CLICK TO SETUP'. At the bottom, there are navigation arrows, a 'SAVE' button, and a 'CANCEL' button.

TV Settings Page 2.

Setup (continued)

Page 3 of TV settings allows you to adjust the display on which the TV plug-in appears. The resolution setting will be changed the size at which the TV picture is displayed.

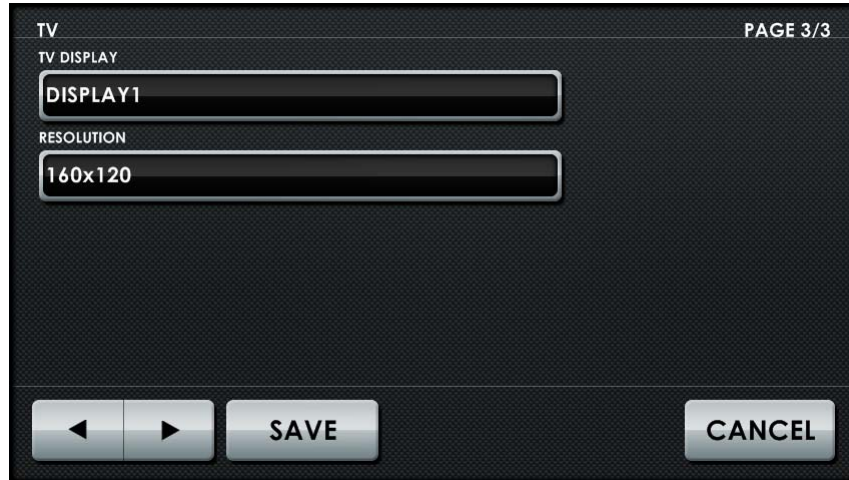

TV Settings Page 3.

Usage

You should see this button in Centrafuse's main menu. Press it to open TV.



TV button in Centrafuse™



TV screen.

The CH - and CH + buttons are used for tuning to other stations. For widescreen or letterbox signals, the aspect ratio can be adjusted by clicking the TV button next to the CH + button.