

# Volume Plug-In

## Volume Plug-In Manual for Centrafuse™

**Author:** Bojan Piki (stric on Flux and mp3car forums)

**Version:** Centrafuse 1.13

**Date:** December 14, 2006

*This plug-in is non-GUI, so there is no screenshot.*

### About

This plug-in is used to control volume in two different ways. First, it will set the volume to a predefined level on startup or resume from hibernation or standby.


The Volume plug-in also provides added functionality while driving. When ENABLED GPS VOLUME is set to ON, the Volume plug-in monitors the speed from the GPS device and adjusts volume according to the predefined settings. These volume levels and speed settings can be adjusted to suit your needs.

### Installation of the plug-in

Open the file CFVolume.msi and follow the instructions. When prompted for the install path make sure to enter the path of the Centrafuse install folder and not any subfolder or any other folder. For example, "*C:\Program Files\Flux Media\Centrafuse*".


## Setup

In the Settings menu, press up/down, until you see VOLUME and then select it and press SETUP.

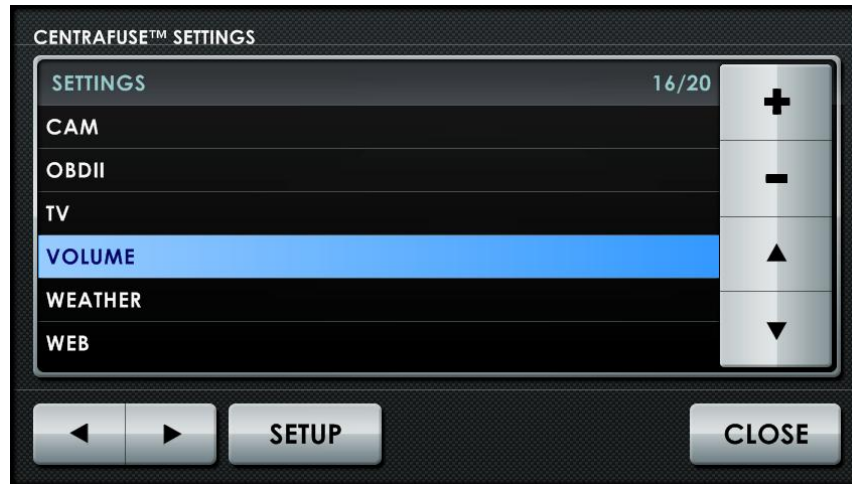

*VOLUME plug-in in Centrafuse™ settings*

This will open page 1 of the Setup screen for the Volume plug-in. First notice the setting for volume. This is the volume that will be set on start up and resume.

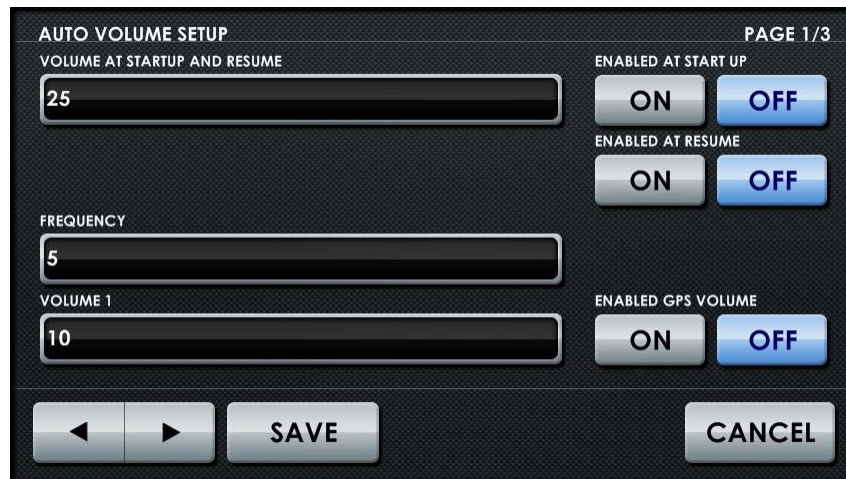


*Settings for Volume plug-in*

On right side there are buttons where you can turn the volume features on or off. Here you can set the frequency for adjusting the volume according to the current speed. This number is in seconds (e.g. if you enter 5, speed will be read every 5 seconds).

On the bottom you can set first volume level, for volume control while driving. When everything is setup on the first page, press the next button on the bottom to go to page 2 of the Volume plug-in Setup.

## Setup (continued)

On the second page you can set 4 more volume levels.



AUTO VOLUME SETUP PAGE 2/3

VOLUME 2  
20

VOLUME 3  
30

VOLUME 4  
50

VOLUME 5  
80

◀ ▶ SAVE CANCEL

*Set volume levels*

On the third page you can set 4 speed settings.



AUTO VOLUME SETUP PAGE 3/3

SPEED 1  
20

SPEED 2  
40

SPEED 3  
80

SPEED 4  
130

◀ ▶ SAVE CANCEL

*Set speed levels*

## Setup (continued)

The following table shows how the volume changes with the speed.

<b>Speed</b>	<b>Volume</b>
0 – SPEED 1	VOLUME 1
SPEED 1 – SPEED 2	VOLUME 2
SPEED 2 – SPEED 3	VOLUME 3
SPEED 3 – SPEED 4	VOLUME 4
SPEED 4 – faster	VOLUME 5

All volume values are in percent (0 – 100) and speeds are absolute values (e.g. 30 will be mph or km/h (based on your Centrafuse settings)).

## Usage

Once the Volume plug-in is setup, no further interaction is required because the plug-in runs in the background. If you want to turn off the Auto GPS volume function, or adjust the volume levels or speed settings, go into the Settings menu, choose Volume, and press SETUP.